


Vent connections are provided on the SAF tank turrets, to allow connection to the site's venting system. The design of the venting system will vary from site to site and is the responsibility of the installation contractor.

1	15/03/10	RP	RU	RP	ISSUED FOR INFO															
REV.	DATE	BY	CHKD.	APPD.	DESCRIPTION															
<p>GENERAL TOLERANCES (unless noted otherwise)</p> <table border="1"> <tr> <td>GRP FABRICATED</td> <td>LINEAR</td> <td>± 5mm</td> <td>ANGLE</td> <td>± 0.5°</td> </tr> <tr> <td>MACHINED</td> <td></td> <td>± 2mm</td> <td></td> <td>± 0.2°</td> </tr> <tr> <td></td> <td></td> <td>± 0.5mm</td> <td></td> <td>± 0.1°</td> </tr> </table>						GRP FABRICATED	LINEAR	± 5mm	ANGLE	± 0.5°	MACHINED		± 2mm		± 0.2°			± 0.5mm		± 0.1°
GRP FABRICATED	LINEAR	± 5mm	ANGLE	± 0.5°																
MACHINED		± 2mm		± 0.2°																
		± 0.5mm		± 0.1°																
<p>IMPORTANT INVERT LEVEL NOTE (RIBBED TANKS ONLY): The inlet and outlet Invert Levels (IL) shown on this drawing is to internals of the shell unless otherwise stated. For Invert level to the outside of the shell ribs, see the conversion below: ø3.0m, 4.0m IL+75mm (X) ø1.0m, 1.2m, 1.5m, 1.8m, 2.5m IL+50mm (X)</p>																				
<p>DO NOT SCALE IF IN DOUBT ASK ALL DIMENSIONS IN MM</p> <p>THIS DRAWING IS THE PROPERTY OF CONDER SOLUTIONS LTD. AND IS NOT TO BE COPIED IN PART OR WHOLE WITHOUT WRITTEN PERMISSION</p> <p>TANKS SUPPLIED WITH LOOSE SHAFTS DO NOT COME SUPPLIED WITH A FIXING KIT. THIS IS THE RESPONSIBILITY OF THE SITE CONTRACTOR.</p>																				



conder
ENVIRONMENTAL SOLUTIONS

TITLE					
SAF060N20 SCHEME SHOWING TYPICAL KIOSK CONNECTIONS					
DRAWN BY	CHKD.	APPD.	SCALE	DRAWING No.	REVISION
RP	RU	RP	NTS	SAF60N20 LAYOUT	1
DATE	DATE	DATE			
15/03/10	15/03/10	15/03/10			